














# 4SAFE

## Door controller without test

In case of older door controllers (without test) with **alternating current voltage (AC)**, the test function of the 4SAFE must be deactivated:

1. Set DIP-switch 3 to „ON“  
(+ confirm by pushing the grey button for at least 3 sec.)
2. Enter the following sequence by remote control:

	1x unlock: RED LED flashes slowly	
	Administrator mode: RED LED flashes quickly	
	RED LED flashes slowly	
	Test signal: RED LED flashes quickly	
	RED LED flashes slowly	
 	2x lock, RED LED goes out	

*Attention: you have entered the administrator mode.  
Please be careful not to press any other buttons!*

3. The BLUE and RED wires should not be connected.

In case of older controllers (without test) with **direct current (DC)**, connect the RED wire to „+“ and the BLUE wire to „-“ of the power supply.