



# Quick Start






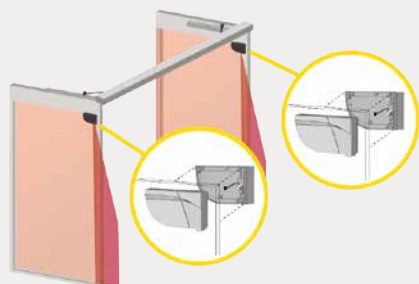










SLAVE

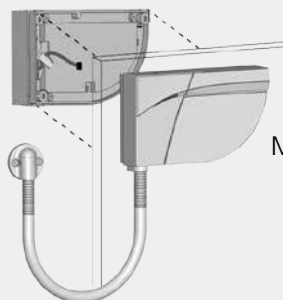








MASTER

## 1 MOUNTING ON DOOR

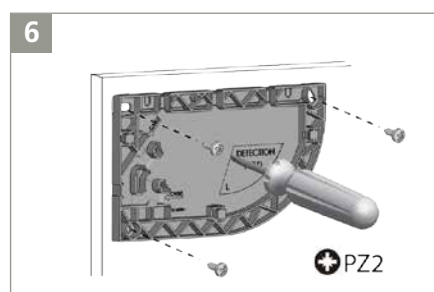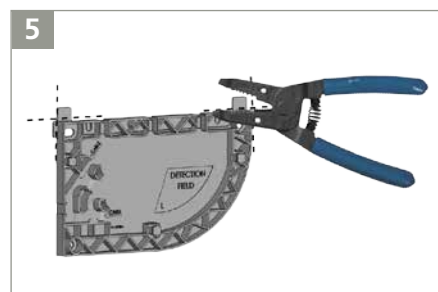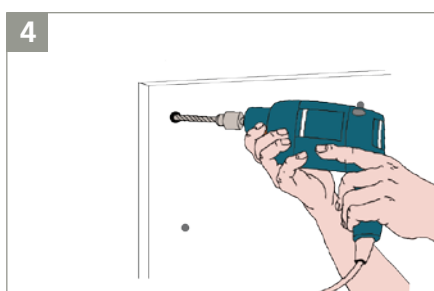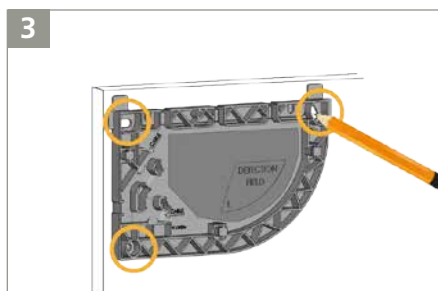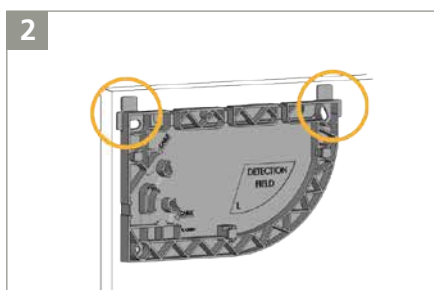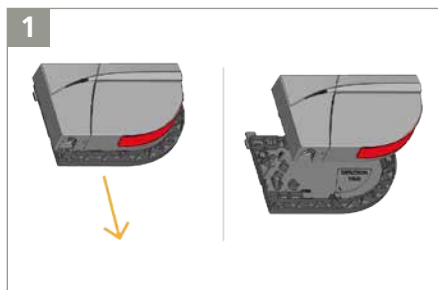


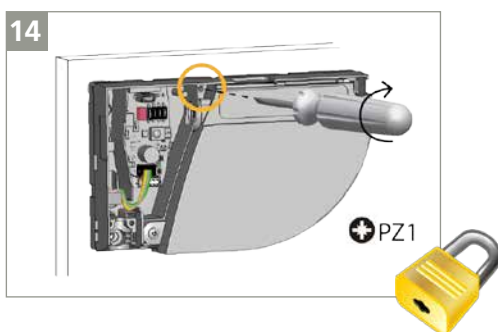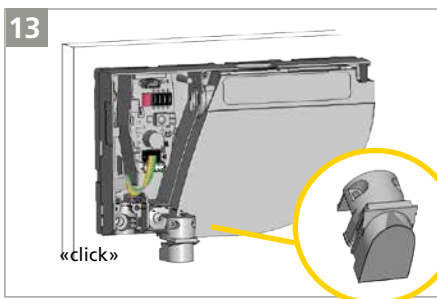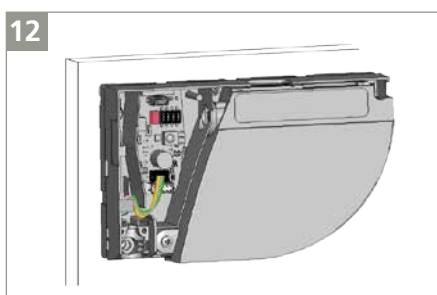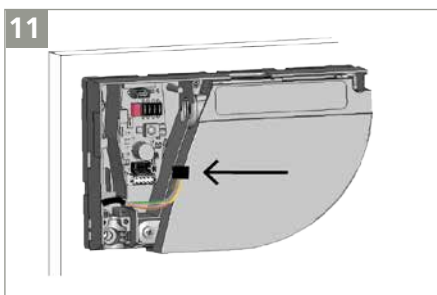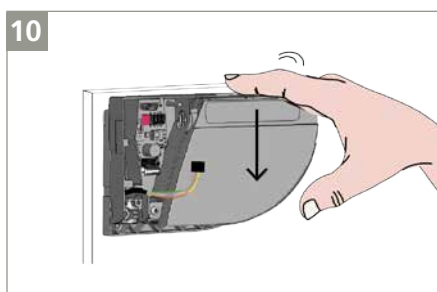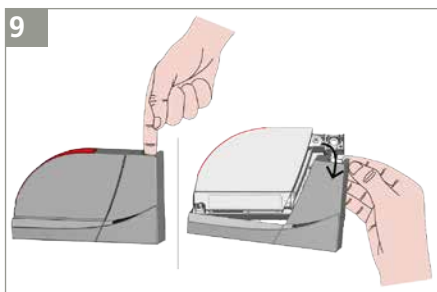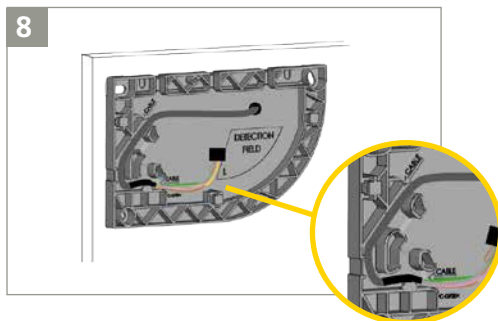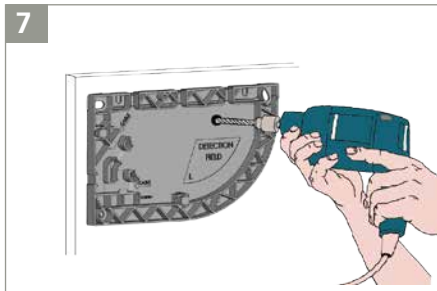


## 2 WIRING TO DOOR CONTROLLER

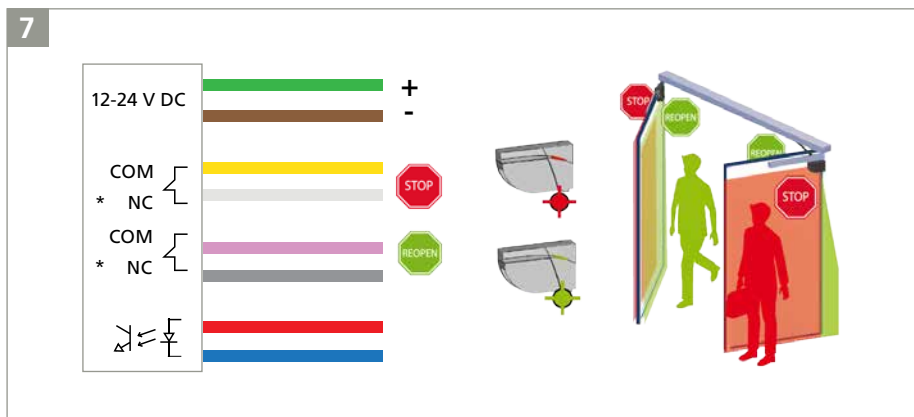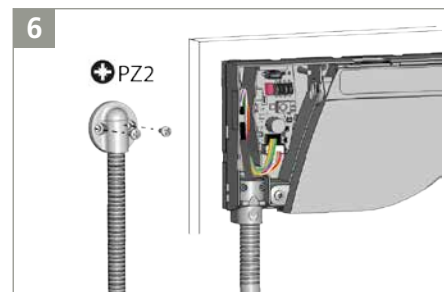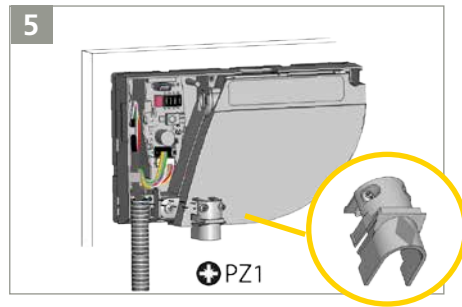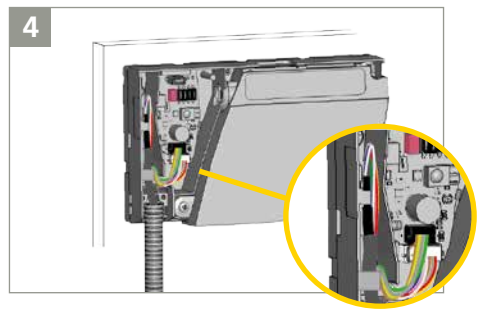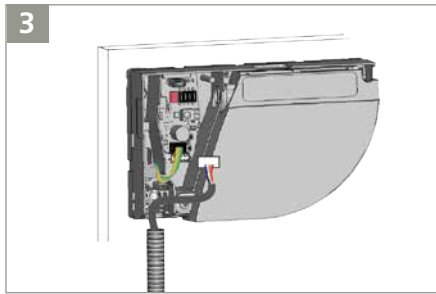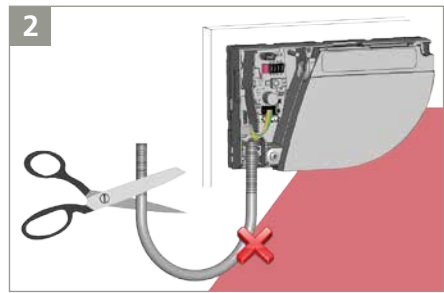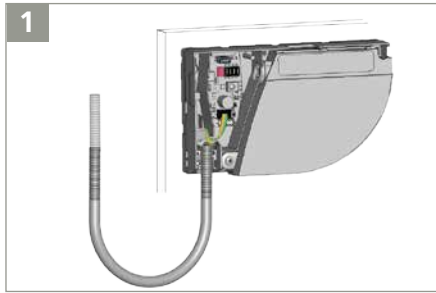


### 3 DIP1

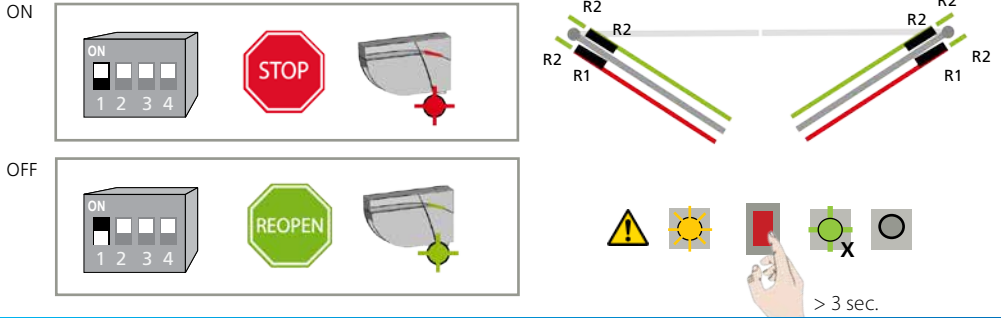

### 4 TEACH-IN

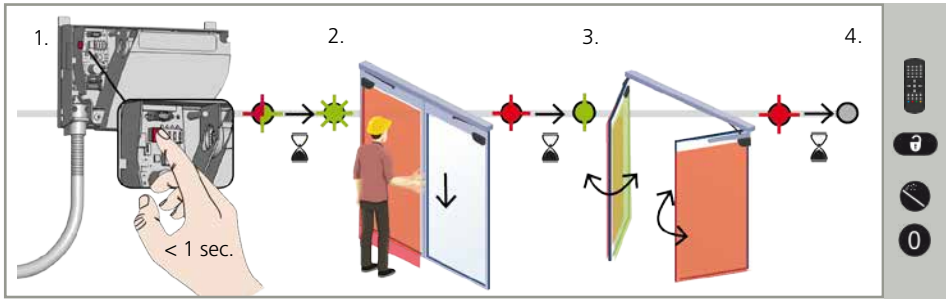

### 5 TEST + ADJUSTMENTS

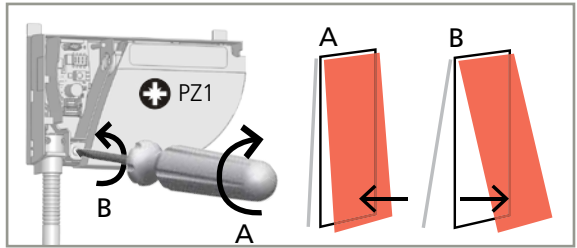

### 6 FINAL STEPS

